

F1: FRAME AND FOOTREST



No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	N/A	N/A	FRAME
2	JHM30102	JHM30102	BRACKET, HANDLEBAR LOCK
3	JHM30103	JHM30103	HEADLIGHT BRACKET
4	GST30104-150	JHM30104-150	Small bracket
5	GST30106-150	JHM30106-150	Engine front bracket
6	GST30105-150	JHM30105-150	Engine rear hanger
Not Shown	JHM30106-150-YF	JHM30106-150-YF	Engine Bracket (right side)
7	JHM30107	JHM30107	REAR FENDER BRACKET
8	JHM30108	JHM30108	SIDE STAND
9	JHM30109	JHM30109	SPRING, SIDE STAND
10	JHM30110	JHM30110	LEFT FOOTREST
11	JHM30111	JHM30111	RIGHT FOOTREST
12	JHM30112	JHM30112	FOOTREST SCREWS
13	JHM30113	JHM30113	SEAT LOCK
14	JHM30114	JHM30114	REAR CARRIER
15	JHM30115	JHM30115	HEADLIGHT BRACKET RUBBER RING
16	JHM30116	JHM30116	SPEEDOMETER BOTTOM RUBBER RING
17	JHM30117-150	JHM30117-150	VALVE BRACKET
18	JHM30118	JHM30118	FR HANGER OF ENGINE

F2: SHOCK ABSORBER




No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30201	JHM30201	STEM STEERING
2	JHM30202	JHM30202	BEARING OF STEM
3	JHM30203	JHM30203	LEFT FRONT ABSOUBER
4	JHM30204	JHM30204	RIGHT FRONT ABSOUBER
5	GST30205-150	JHM30205-150	REAR ABSOUBER
6	JHM30206	JHM30206	REAR ABSOUBER BOLT
7	JHM30207	JHM30207	REAR ABSOUBER NUT
8	JHM30208	JHM30208	FRONT WHEEL AXLE
9	JHM30209	JHM30209	FRONT WHEEL AXLE BUSH
10	JHM30210	JHM30210	FRONT WHEEL AXLE CAP
11	JHM30211	JHM30211	SET LOCK
12	JHM30212-150	JHM30212-150	MUFFLER
13	JHM30213	JHM30213	FRONT DISC BRAKE PUMP
14	JHM30214	JHM30214	FRONT DISC BRAKE PUMP CLIP
15	JHM30215	JHM30215	STEM STEERING NUT

F3: HANDLE BAR AND SWITCH



No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30301	JHM30301	HANDLEBAR
2	JHM30302	JHM30302	HANDLEBAR BLOCK,UP
3	JHM30303	JHM30303	HANDLEBAR BLOCK,DOWN
4	JHM30304	JHM30304	HANDLEBAR BLOCK,UP ,RUBBER
5	JHM30305	JHM30305	HANDLEBAR BLOCK,DOWN,RUBBER
6	JHM30306	JHM30306	GRIP, LH
7	JHM30307	JHM30307	GRIP, RH
8	JHM30308	JHM30308	BALANCE WEIGHT
9	JHM30309	JHM30309	UPPER PLATE
10	JHM30310	JHM30310	UPPER PLATE BOLT
11	GST30311-150	JHM30311	LEFT SWITCH
12	GST30312-150	JHM30312	RIGHT SWITCH
13	JHM30313	JHM30313	MIRROR LH
14	JHM30314	JHM30314	MIRROR RH
15	JHM30315	JHM30315	CLUTCH
16	JHM30316-150	JHM30316-150	CABLE, THROTTLE
17	JHM30317	JHM30317	SEAT LOCK CABLE
18	JHM30318-150	JHM30318-150	REAR BRAKE CABLE
19	JHM30319	JHM30319	ROTARY GEAR
20	JHM30320	JHM30320	HANDLEBAR BLOCK ,UP,BOLT
21	JHM30321	JHM30321	HANDLEBAR BLOCK ,DOWN,GASKET
22	JHM30322	JHM30322	HANDLEBAR BLOCK ,DOWN,NUT

F4: MUFFLER AND AIR-CLEANER

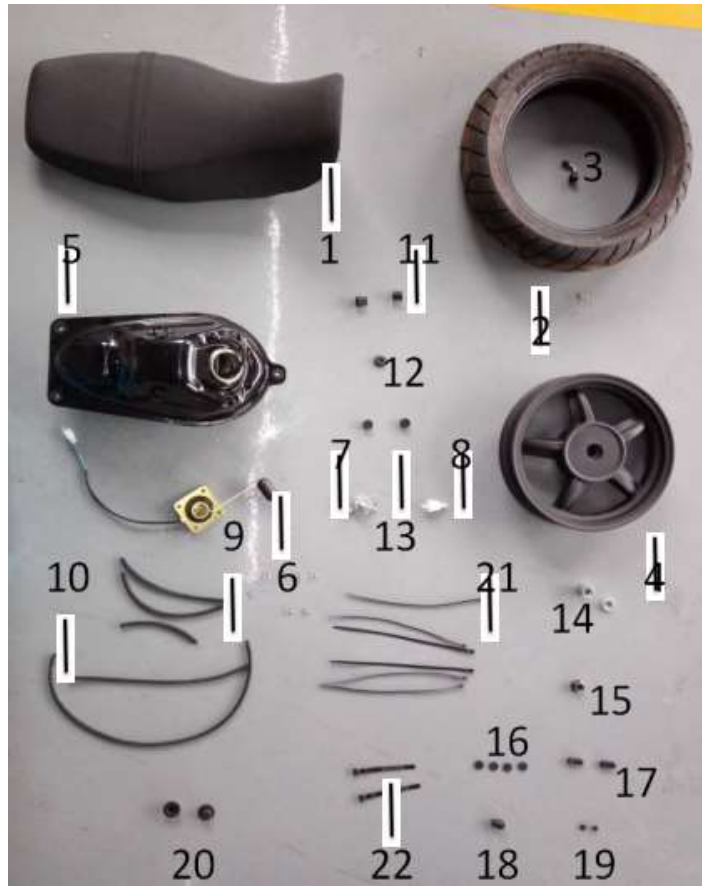

No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30401	JHM30401	SEAT
2	JHM30402	JHM30402	REAR TIRE
3	JHM30403	JHM30403	TIRE AIR VALVE
4	JHM30404	JHM30404	REAR WHEEL
5	JHM30405	JHM30405	FUEL TANK
6	JHM30406	JHM30406	FUEL SENSOR
7	JHM30407	JHM30407	FUEL SWITCH
8	JHM30408	JHM30408	SMALL FUEL CUP
9	JHM30409	JHM30409	FUEL PIPE
10	JHM30410	JHM30410	AIR PIPE
11	JHM30411	JHM30411	FUEL TANK FRONT FIXING RUBBER
12	JHM30412	JHM30412	FUEL TANK COVER FIXING RUBBER
13	JHM30413	JHM30413	FUEL TANK REAR FIXING RUBBER
14	JHM30414-150	JHM30414-150	REAR WHEEL BUSH
15	JHM30415	JHM30415	REAR WHEEL NUT
16	JHM30416	JHM30416	L&R FRONT COVER RUBBER RING
17	JHM30417	JHM30417	L&R PROTECTION COVER RUBBER RING
18	JHM30418	JHM30418	REAR LICENSE FIXING RUBBER
19	JHM30419	JHM30419	UPPER BLOCK WATERPROOF RUBBER
20	JHM30420	JHM30420	HEADLIGHT FIXING RUBBER
21	JHM30421	JHM30421	TIE
22	JHM30422	JHM30422	TIE FOR HANDLEBAR

F5: PLASTIC PARTS-1




No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30501	JHM30501	FUEL TANK UPPER
2	JHM30502	JHM30502	FUEL TANK DOWN
3	JHM30503	JHM30503	FRAME FRONT FENDER
4	JHM30504	JHM30504	FRAME BOTTOM PLATE
5	JHM30505	JHM30505	FUEL TANK COVER,LEFT
6	JHM30506	JHM30506	FUEL TANK COVER,RIGHT
7	JHM30507	JHM30507	LEFT CONNECTION BLOCK,UPPER
8	JHM30508	JHM30508	LEFT CONNECTION BLOCK,DOWN
9	JHM30509	JHM30509	RIGHT CONNECTION BLOCK,UPPER
10	JHM30510	JHM30510	RIGHT CONNECTION BLOCK,DOWN
11	JHM30511	JHM30511	FRAME FRONT FENDER CONNECTION PLATE,LEFT
12	JHM30512	JHM30512	FRAME FRONT FENDER CONNECTION PLATE,RIGHT
13	JHM30513	JHM30513	SEAT LOCK BOX
14	JHM30514	JHM30514	REAR WHEEL FENDER
15	JHM30515	JHM30515	REAR FENDER ,DOWN
16	JHM30516	JHM30516	REAR FENDER ,UPPER

F6: PLASTIC PARTS-2



No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30601	JHM30601	WIND COVER
2	JHM30602	JHM30602	HEADLIGHT COVER
3	JHM30603	JHM30603	FRONT FENDER,UPPER
4	JHM30604	JHM30604	FRONT FENDER,DOWN
5	JHM30605	JHM30605	FRONT FENDER,DOWN,LEFT
6	JHM30606	JHM30606	FRONT FENDER,DOWN,RIGHT
7	JHM30607	JHM30607	Fr.LEFT TURNING LIGHT CONNECTION PLATE
8	JHM30608	JHM30608	Fr.RIGHT TURNING LIGHT CONNECTION PLATE
9	JHM30609	JHM30609	LEFT PROTECTION PLATE,UPPER
10	JHM30610	JHM30610	LEFT PROTECTION PLATE,MIDDLE
11	JHM30611	JHM30611	SEAT LOCK COVER
12	JHM30612	JHM30612	LEFT PROTECTION PLATE,MIDDLE,CONNECTION PLATE
13	JHM30613	JHM30613	LEFT PROTECTION PLATE,DOWN
14	JHM30614	JHM30614	RIGHT PROTECTION PLATE,UPPER
15	JHM30615	JHM30615	RIGHT PROTECTION PLATE,MIDDLE
16	JHM30616	JHM30616	OIL NEEDLE HOLE COVER
17	JHM30617	JHM30617	RIGHT PROTECTION PLATE,MIDDLE,CONNECTION PLATE
18	JHM30618	JHM30618	RIGHT PROTECTION PLATE,DOWN
19	JHM30619	JHM30619	LEFT PROTECTION COVER
20	JHM30620	JHM30620	RIGHT PROTECTION COVER
21	JHM30621	JHM30621	REAR CONNECTION PLATE

F7: ENGINE

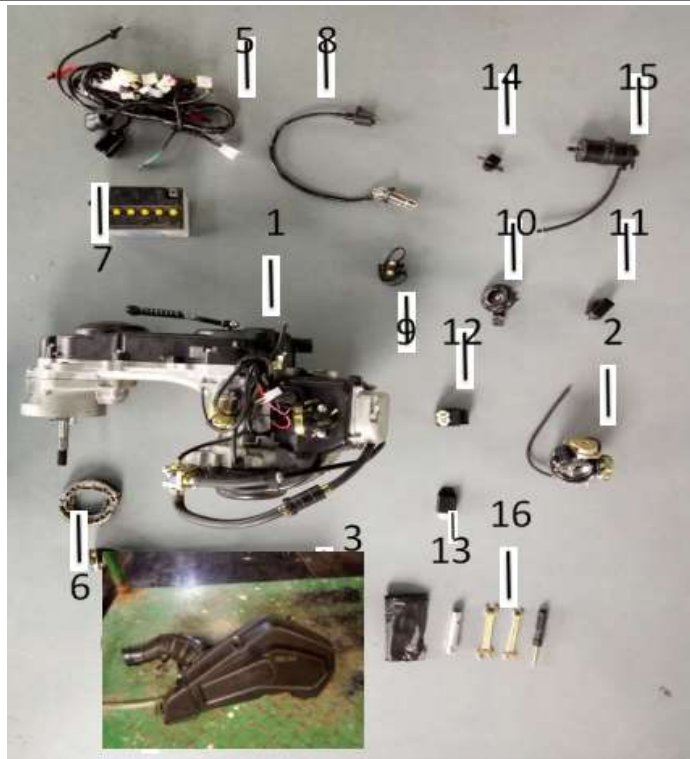

No	Part Number (Vin starts with LLO)	Part Number (Vin starts with LLP)	Description
1	JHM30701-150	JHM30701-150	ENGINE ASSY
2	JHM30702-150	JHM30702-150	CABURETER
3	GST30703-150	JHM30703-150	AIR FILTER
4	JHM30704-150	JHM30704-150	AIR FILTER ELEMENT
5	GST30705-150	JHM30705-150	MAIN CABLE
6	JHM30706-150	JHM30706-150	BRAKE SHOE
7	JHM30707	JHM30707	BATTERY
8	JHM30708	JHM30708	HIGH PRESSURE BAG
9	JHM30709	JHM30709	RELAY
10	JHM30710	JHM30710	HORN
11	JHM30711	JHM30711	FLASHOR
12	JHM30712	JHM30712	CDI
13	JHM30713	JHM30713	REGULATOR
14	JHM30714	JHM30714	DUMP VALVE
15	JHM30715-150	JHM30715-150	CARBON TANK
16	JHM30716	JHM30716	TOOLS

